


# PROGRAMMING SHADE MOTORS

## CHANGING MOTOR SPEED

---

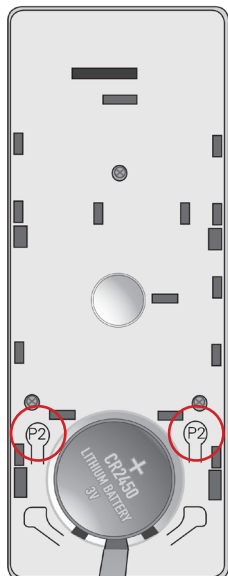

BACK OF REMOTE  
WITH COVER REMOVED



FRONT OF REMOTE

1. Remove the battery cover on the back of the remote. You will need to have access to the P2 button on the back of the remote to make speed adjustments.  
**Note:** To remove the battery cover, press in the small button on the battery cover using a tool with a tip and slide the cover down.
2. To increase the speed, use the following sequence:  
**P2 + Shade Jog + Up Button + Shade Jog + Up Button + Shade Jog**
3. To decrease the speed, use the following sequence:  
**P2 + Shade Jog + Down Button + Shade Jog + Down Button + Shade Jog**
4. The motor has three speeds. Once the shade has reached its fastest/slowest speed, the shade will no longer jog after pressing the up/down button the second time.