


SHUTTER INSTALLATION

Tools required - Hand Drill, Counter Sink Drill Bit Set #8, Level

What's Included - Shutters come pre hinged and pre framed from the factory to ensure perfect operation. Pre attached magnets are available. *(surcharge applies)*

2 Mounting Options

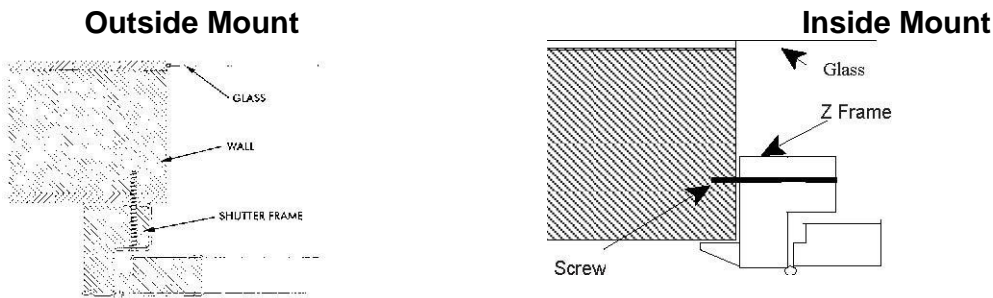

- (1) Before placing the shutter in the window, **Assemble Frame, Predrill 4 installation holes 4"** from the top and bottom corners of hinged frame legs.
- (2) Position frame around windows top corner, then drill screw at top hole of hinged frame. (Note that the base of the bottom hinge is closest to frame corner.)
- (3) Level frame and attach screw at top right hole of hinged frame.
- (4) Hang panels on frame using top and bottom hinges as guide posts.
- (5) Close panels and align by moving bottom frame left and right.
- (6) Once panels align, hold bottom frame in place, open panels and gently drive screws through center bottom of frame. Do not over tighten. Attach remaining screws through each vertical frame leg corner joint, 1" from corners. On window wider than 4", attach center screw through the top frame. Now attach magnets.

