


Skyline 3" Fascia Fabrication


1. Cut shade tube shorter than the measured width based on the clutch-size shown on "Roller Shade Deduction Chart - Skyline" on www.rollease.com/other-technical-documents

Regular and Fascia Brackets use the same deductions.


2. Cut fascia to Dimension A (see chart)
No deductions or notching are required.

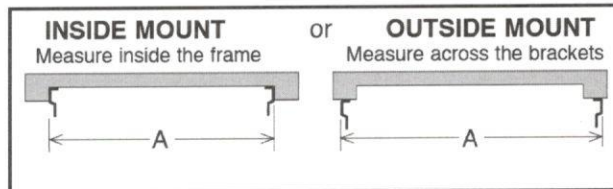

3. Insert chain diverter into clutch side mounting bracket only. Hinge the chain diverter on the bracket's lower tabs and rotate backward into the bracket. Make sure the two round pins on the chain diverter "click" into the two matching round holes on the bracket.

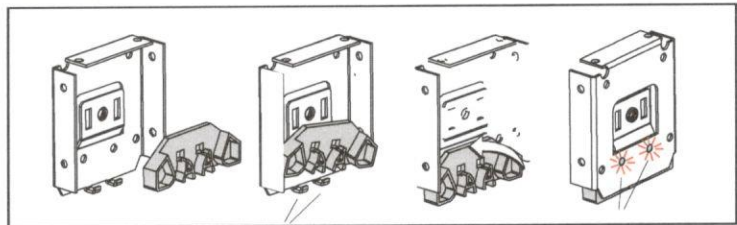

When using the SL-10 with fascia brackets and panel, install the shade and route the control cord/bead chain through the front two channels as usual. Snap the diverter cover on the chain diverter as shown.

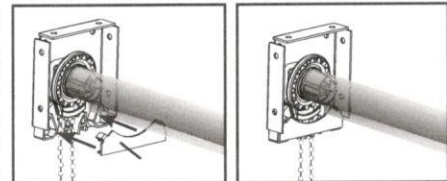


Note: SL20 diverter does not use a cover.

Note: For notchless fascia route chain through back channel and center channel of chain diverter.

Note: Insert clutch into bracket first followed by pin end.


RollEase®

Skyline 3" & 4" Fascia Installation

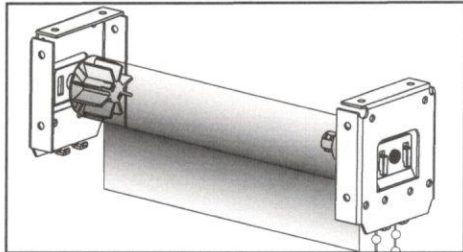

Attaching 3 inch Fascia

- 1.) Fascia may be cut to the dimension "A" as determined on formula on page SL-20, no deductions are required to accommodate brackets.
- 2.) Hook the fascia on the top of bracket first, and rotate downward. Press until the bottom hooked feature on the fascia engages and is locked to the tabs of the bracket.

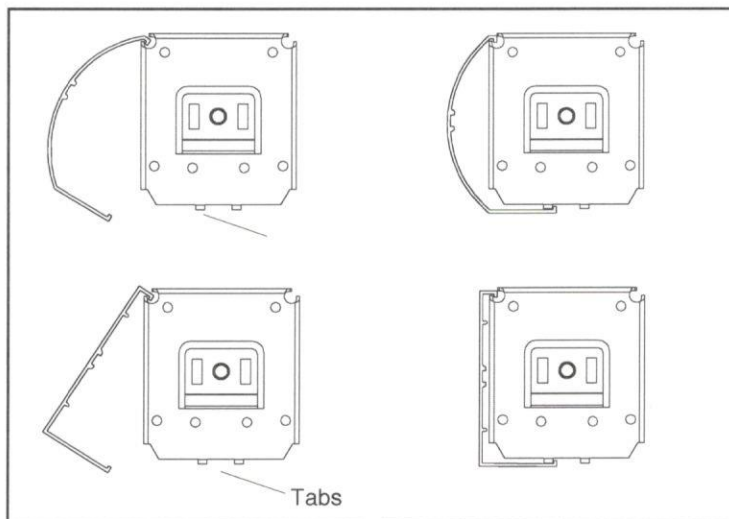

RollEase Headquarters
200 Harvard Avenue
Stamford, CT 06902-6320 USA
Office: 203.964.1573 / 800.552.5100
Fax: 203.964.0513 Order Fax: 203.358.5865
www.rollease.com

RollEase Distribution Center
320 Expo Boulevard
Lenoir, NC 28645 USA

RollEase West
7310 West Roosevelt Street, Suite 26
Phoenix, AZ 85043 USA
Office: 623.936.5818
Order Fax: 623.936.5294