
5" FASCIA - SKYLINE CLUTCH | DUAL

Pin End Assembly

NOTE: Once the Insert Plate is assembled with the bracket, it cannot be released.

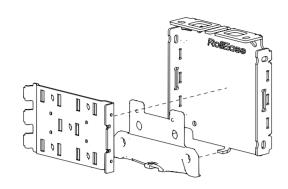

OPTIONAL:

Use a Mallet to snap the Skyline Insert Plate to the bracket

OPTIONAL:

Use a Mallet to snap the Skyline Insert Plate to the bracket

Attach Top Roller Assembly Pin first

NOTE: Once the Insert Plate is assembled with

the bracket, it cannot be released.


Control End Assembly

For Inside Mount: Attach Fascia before continuing

WALL MOUNT

INSIDE MOUNT


Attach Chain Diverter to bracket Assembly

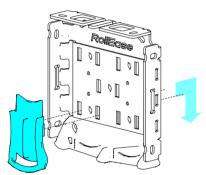


Push hooks thorough the bracket and pull down

Push hooks thorough the bracket and pull down

Pull Chain through Chain Diverter

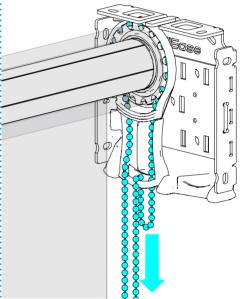


Attach Bottom Roller Assembly Pin first

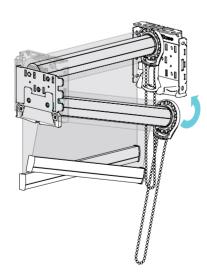

Push hooks thorough the bracket and pull down

Attach Fascia Panels Outside Mount:

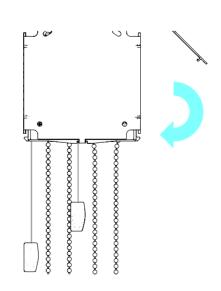

Attach Bracket Covers

