



SKYLINE FASCIA - 3&4 inch Chain Control

PRODUCT SPECIFICATIONS

Caco, inc. www.cacoinc.com



CONTENTS

SECTION A OVERVIEW		01
GENERAL SCHEMATICS		01
SYSTEM OPTIONS		02
SYSTEM UPGRADES		02
COLOR OPTIONS ..		02
SECTION B SPECIFICATION IMAGES		03
ARCHITECTURAL VIEWS		03
MAXIMUM ROLL DIAMETERS		04
FASCIA DEDUCTIONS + NOTCH		04
DEDUCTIONS		05
SECTION C ASSEMBLY & INSTALLATION		07
3" FASCIA - SKYLINE		07
4" FASCIA - SKYLINE		08
4" FASCIA - EASY LINK SYSTEM		09

DISCLAIMER

INTRODUCTION
This Product Specifications manual for Skyline 3&4" Fascia has been produced by Rollease Acmeda to supply the necessary information for the safe and correct installation of Skyline 3&4" Fascia.


DISCLAIMER
Rollease Acmeda has used reasonable care in preparing the information included in this document, but makes no representations or warranties as to the completeness or accuracy of the information. Information is supplied upon the condition that the persons receiving the information will make their own determination as to its suitability for their purposes prior to use. Rollease Acmeda assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein. Rollease Acmeda reserves the right to make changes without further notice to any products to improve reliability, function or design.

COPYRIGHT
COPYRIGHT © ROLLEASE ACMEDA
All rights are reserved. No part of this document may be reproduced or utilised in any means, by any means, electronic or mechanical including photocopying, recordings, or by any information storage or retrieval system, without the express permission from Rollease Acmeda.



GENERAL SCHEMATICS


3" FASCIA

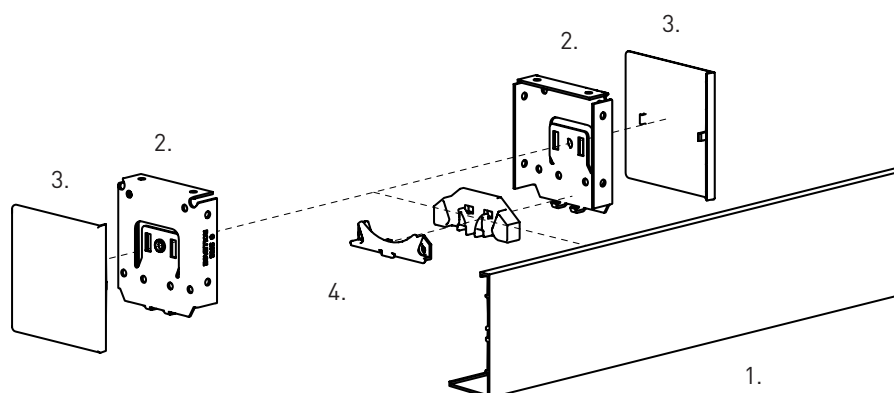

SYSTEM INDEX:

1. 3" Skyline Square Fascia
2. 3" Skyline Fascia Bracket
3. 3" Skyline Square End Cap
4. Chain Diverter & Cover Set

4" FASCIA

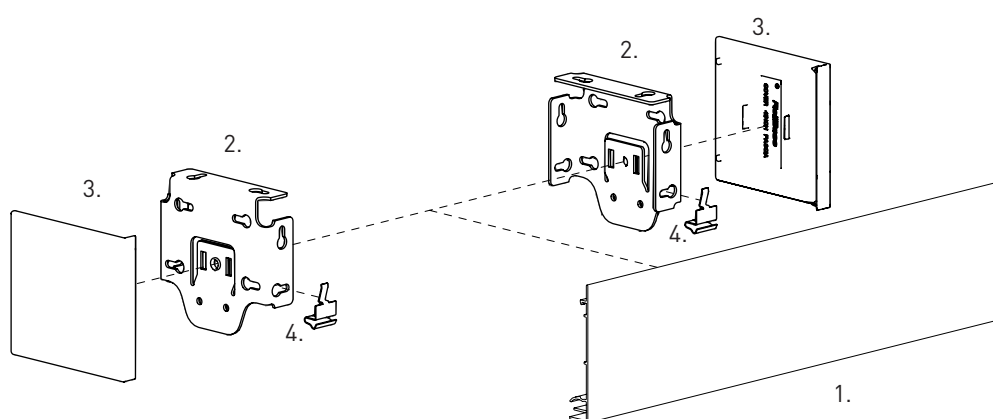

SYSTEM INDEX:

1. 4" Skyline Square Fascia
2. 4" Skyline Fascia Bracket
3. 4" Skyline Bracket Cover
4. Skyline Bracket Clip


SYSTEM OPTIONS

CONTROL OPTIONS




SYSTEM UPGRADES

SINGLE LINK SYSTEM

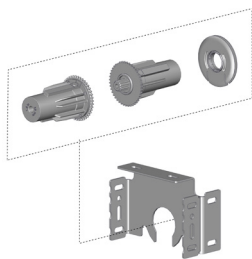

LINK - ADJUSTABLE

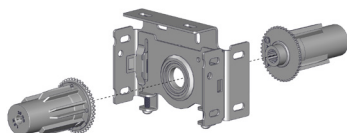

COLOR OPTIONS



WHITE



VANILLA



ANODISED




BLACK




BRONZE

ARCHITECTURAL VIEWS

3" FASCIA

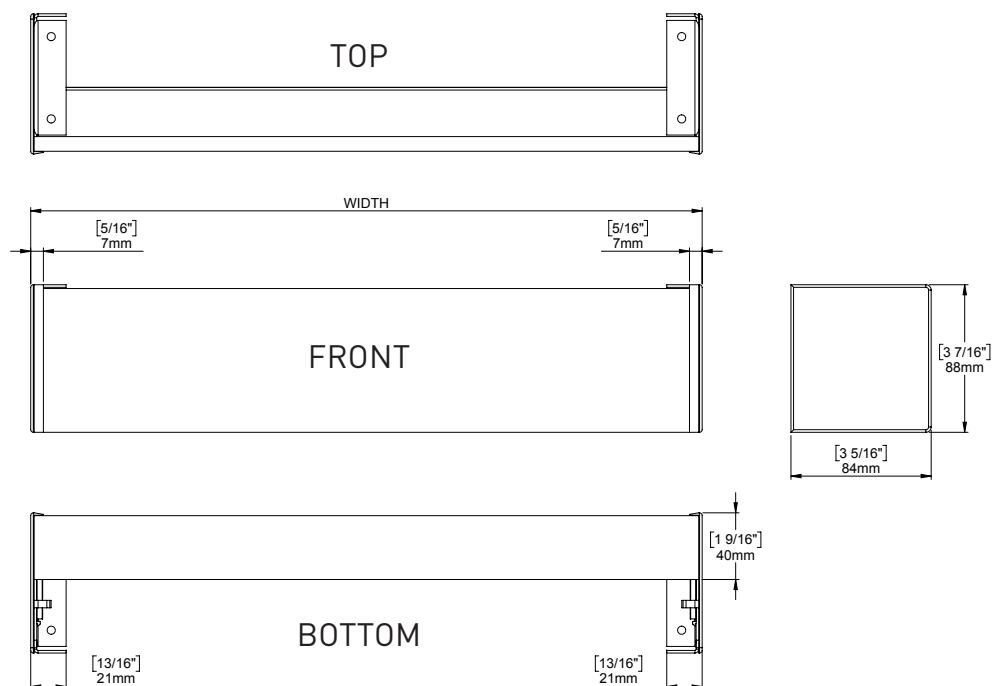


4" FASCIA

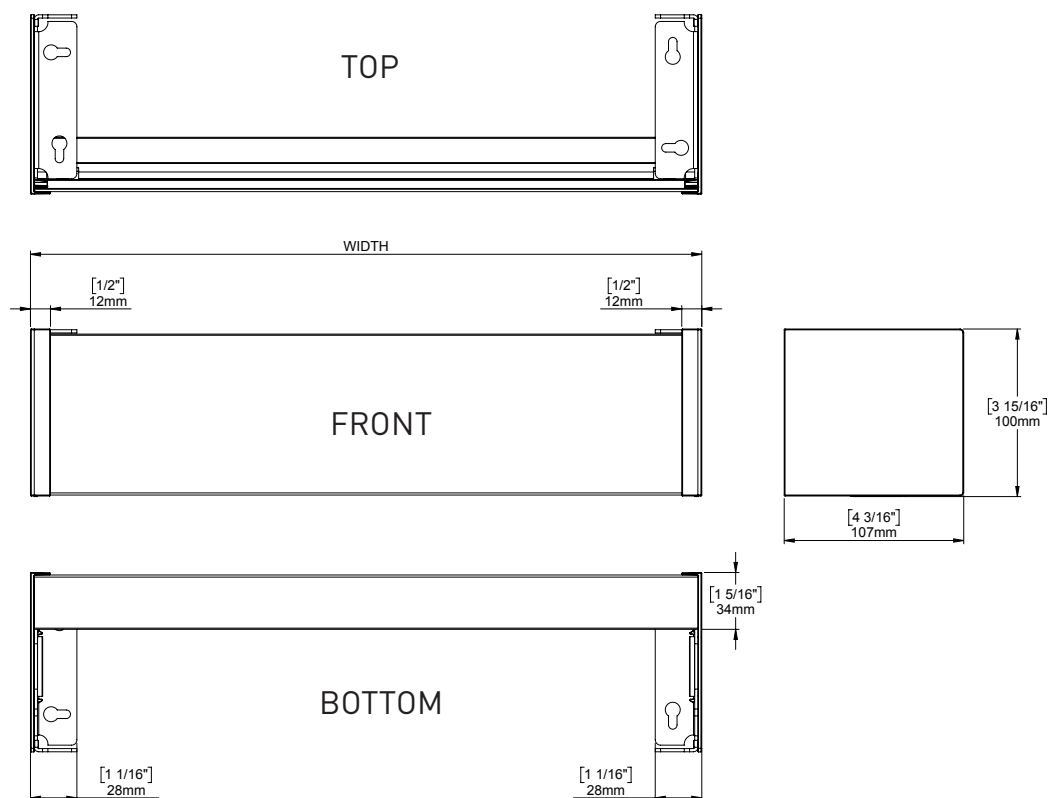


MAXIMUM ROLL DIAMETERS

3" FASCIA

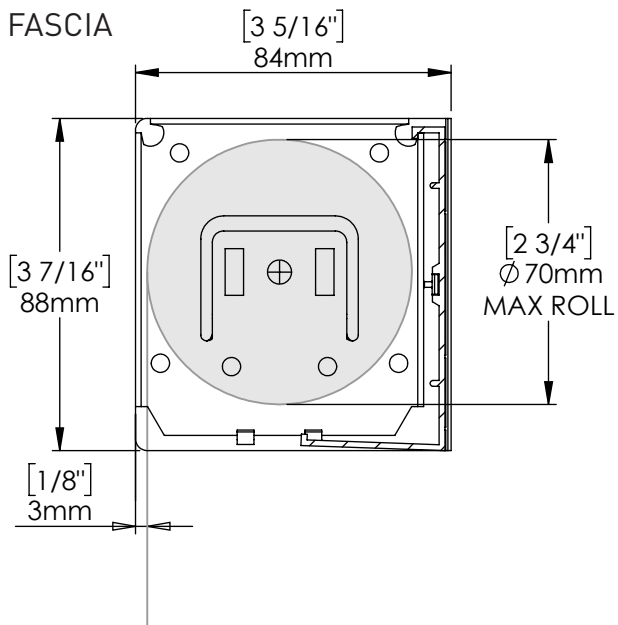



System	Tube	Max Distance from back of bracket X
3"	1-1/8"	24mm [15/16"]
	1-1/4"	22mm [7/8"]
	1-1/2"	19mm [3/4"]
	2"	13mm [1/2"]
	2-1/2"	19mm [3/4"]

4" FASCIA

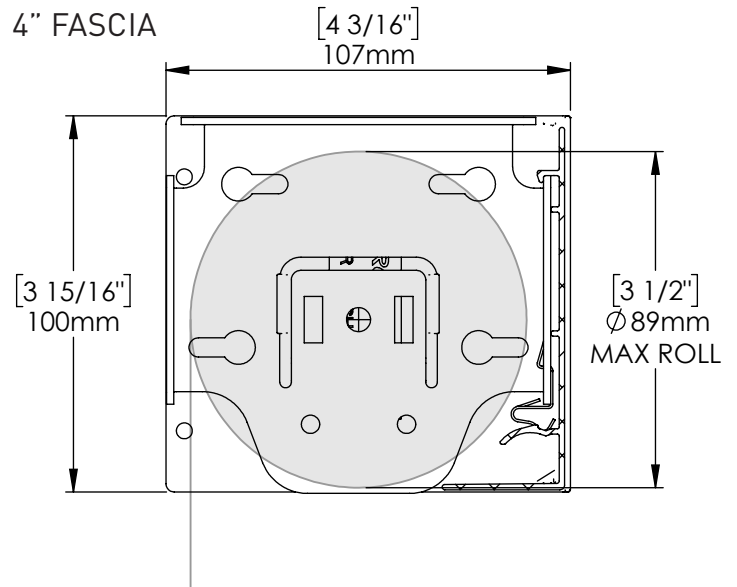


System	Tube	Max Distance from back of bracket X
4"	1-1/8"	37mm [1-7/16"]
	1-1/4"	35mm [1-3/8"]
	1-1/2"	32mm [1-1/4"]
	2"	26mm [1"]
	2-1/2"	19mm [3/4"]

FASCIA DEDUCTIONS + NOTCH

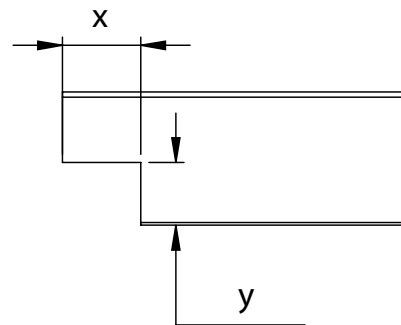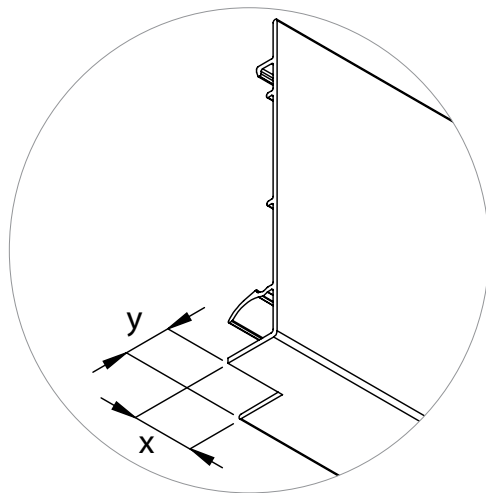


CONFIGURATION	NOTCH DIMENSIONS		FASCIA DEDUCTIONS	
	x	y	With Bracket Covers	Without Bracket Covers
3" FASCIA PANEL FOR ALL CLUTCHES	-	-	Shade Width - 4mm [0.16"]	Shade Width
4" FASCIA PANEL FOR SL15 CLUTCH	-	-		
4" FASCIA PANEL FOR SL20 CLUTCH	-	-		
4" FASCIA PANEL FOR G200 CLUTCH	-	-		
4" FASCIA PANEL FOR SL30 CLUTCH	20mm [3/4"]	16mm [5/8"]		
4" FASCIA PANEL FOR G400 CLUTCH	20mm [3/4"]	16mm [5/8"]		

DEDUCTIONS

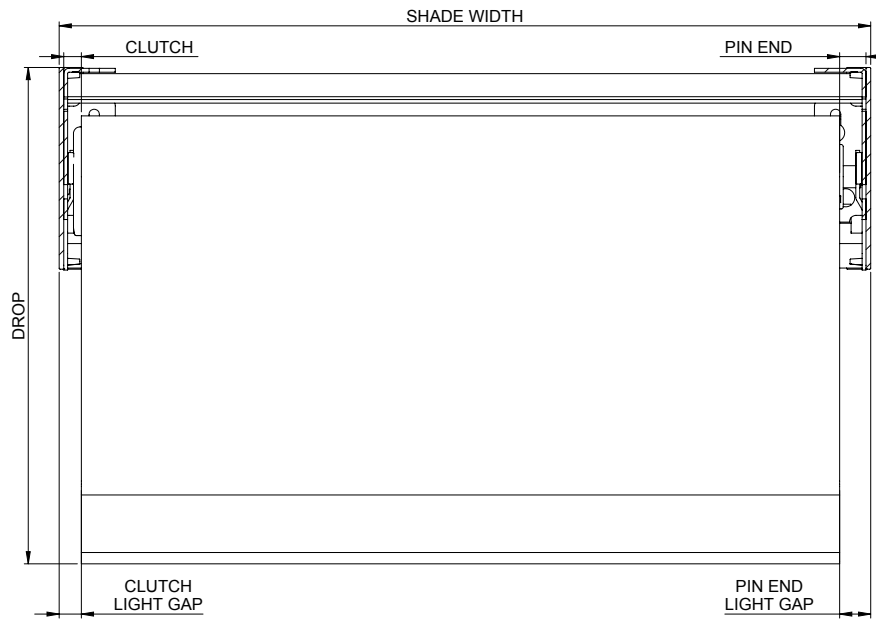

System	Tube	Clutch	Brackets	Pin End	Adapter	Chain Diverter	Tube Deduction		Light Gap with Bracket Covers*	
							With Bracket Covers	Without Bracket Covers	Control Side	Pin End Side
3"	1-1/8"	SL10	SLFBKT3xx	SLPEV01xx	-	SL15CDCVR	32mm [1.26"]	28mm [1.10"]	17mm [0.67"]	15mm [0.59"]
	1-1/4"	SL10		SLPEV03xx	SLA03xx	SL15CDCVR				
	1-1/2"	SL10		SLPEV53xx	SLA53xx	SL15CDCVR				
	1-1/8"	SL15		SLPEV01xx	-	SL15CDCVR				
	1-1/4"	SL15		SLPEV03xx	SLA03xx	SL15CDCVR				
	1-1/2"	SL15		SLPEV53xx	SLA53xx	SL15CDCVR				
	1-1/2"	SL20		SLPEV53xx	-	SLCDxx	34mm [1.33"]	30mm [1.17"]	19mm [0.74"]	
	2"	SL20		SLPEV53xx	RA2xx	SLCDxx	37mm [1.47"]	33mm [1.31"]	21mm [0.84"]	
	1-1/2"	G200		SLPEVHD53xx	-	SLCDxx				
	2"	G200		SLPEVHD53xx	RA2xx	SLCDxx				
4"	1-1/8"	SL15	SLFBKT4xx	SLPEV01xx	-	-	33mm [1.28"]	28mm [1.10"]	18mm [0.69"]	15mm [0.59"]
	1-1/4"	SL15		SLPEV03xx	SLA03xx					
	1-1/2"	SL15		SLPEV653xx	SLA53xx					
	1-1/2"	SL20		SLPEV653xx	-		35mm [1.35"]	30mm [1.17"]	20mm [0.76"]	15mm [0.59"]
	2"	SL20		SLPEV653xx	RA2xx		36mm [1.40"]	31mm [1.22"]	21mm [0.81"]	15mm [0.59"]
	1-1/2"	SL30		SLPEV653xx	-					
	2"	SL30		SLPEV653xx	RA2xx					
	2-1/2"	SL30		SLPEV653xx	RA25xx		37mm [1.46"]	32mm [1.25"]	21mm [0.84"]	16mm [0.62"]
	1-1/2"	G200		SLPEHD653xx	-		38mm [1.49"]	34mm [1.31"]	22mm [0.87"]	16mm [0.62"]
	2"	G200		SLPEHD653xx	RA2xx					
	1-1/2"	G400		SLPEHD653xx	-					
	2"	G400		SLPEHD653xx	RA2xx		37mm [1.43"]	32mm [1.25"]	21mm [0.81"]	16mm [0.62"]
	2-1/2"	G400		SLPEHD653xx	RA2xx					
	NOTES	*For 3" Systems - Deduct 2mm [0.08"] from each side to for Light Gap "without bracket covers" value								
*For 4" Systems - Deduct 3mm [0.09"] from each side to for Light Gap "without bracket covers" value										


DEDUCTIONS

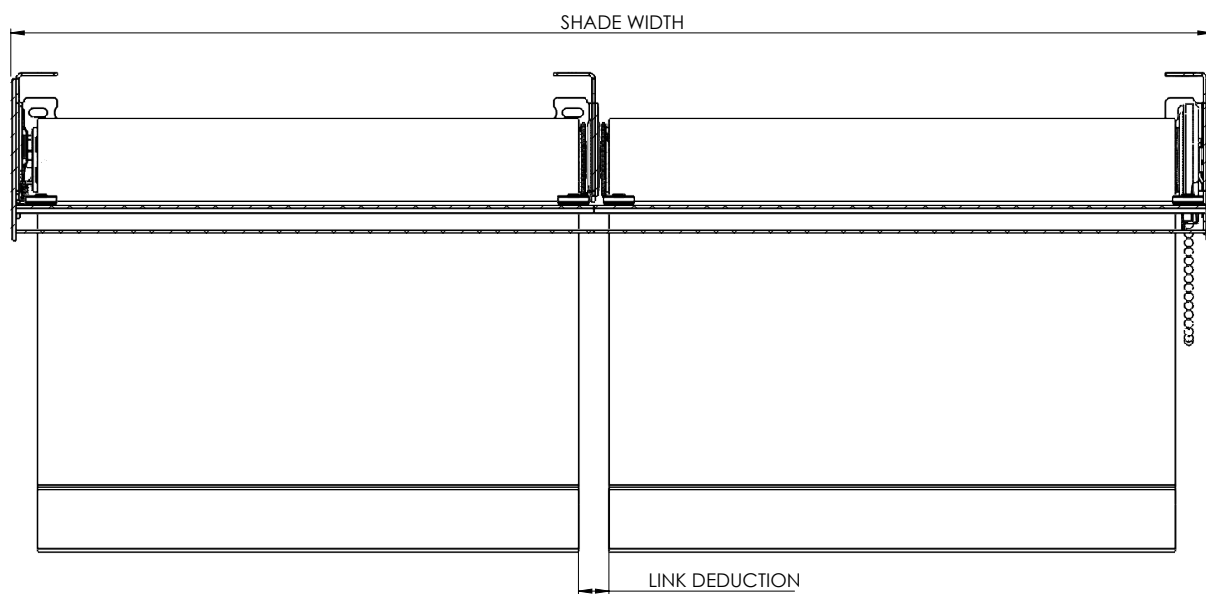


LINK SYSTEM	DEDUCTION
SKYLINE EASY-LINK	19mm [3/4"]

3" FASCIA - SKYLINE


Wall Mount

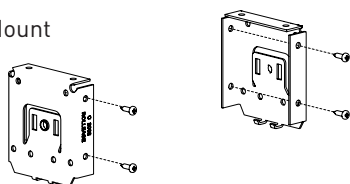


Inside Mount

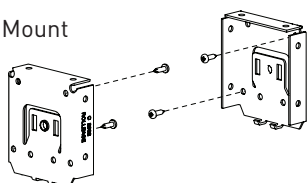


Ceiling Mount

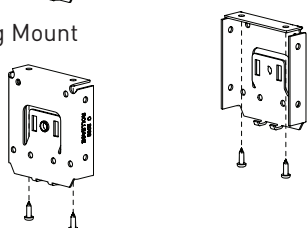


Attach Chain Diverter

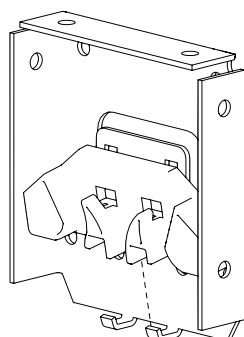


Align Clutch end first, swing assembly to bracket

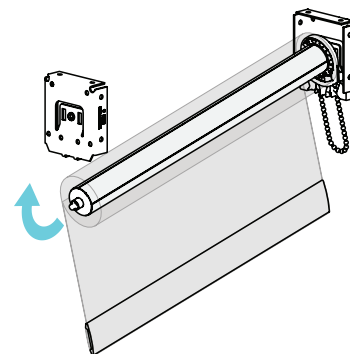

Ensure Clutch Hooks engage Bracket

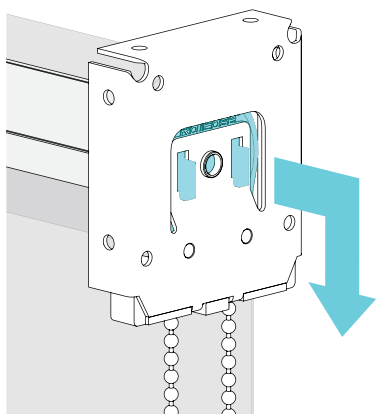


Align the chain in the diverter (SAME POSITION FOR ALL CLUTCHES)

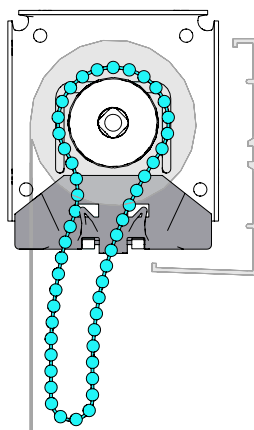


This allows room for fascia attachment

SL10 & SL15:
Attach Chain Diverter Cover

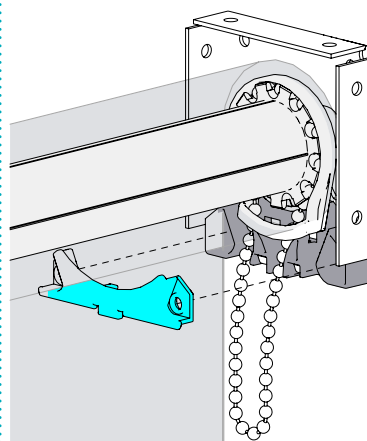


If needed, secure the cover with screws


SL20 & G200
(No Cover)

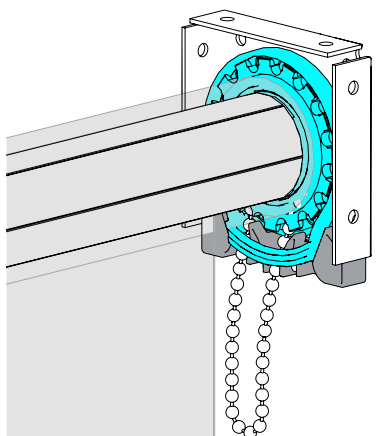

Attach Fascia Cover. Swing from top

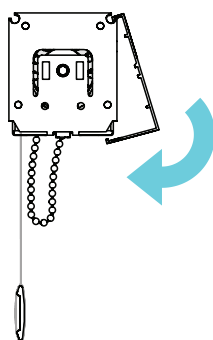


Attach Bracket Covers

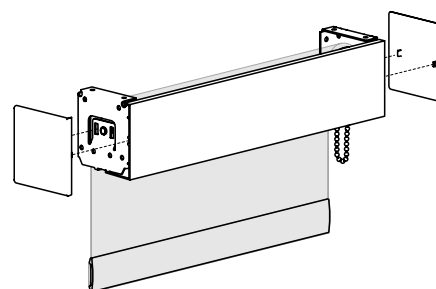


4" FASCIA - SKYLINE


Wall Mount

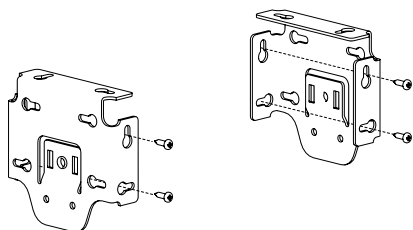


Ceiling Mount

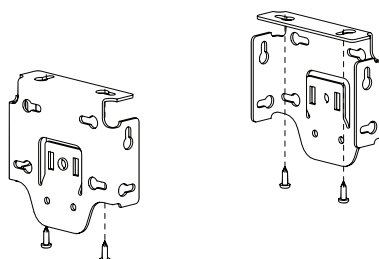


Inside Mount

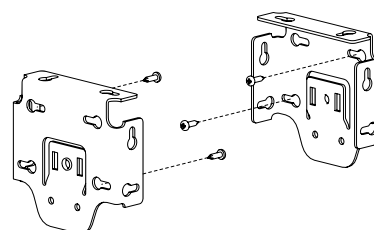


Compress Idler, swing assembly to bracket

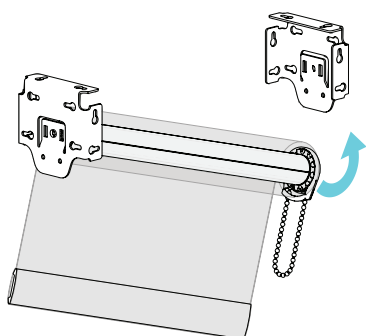


Ensure Clutch Hooks engage Bracket

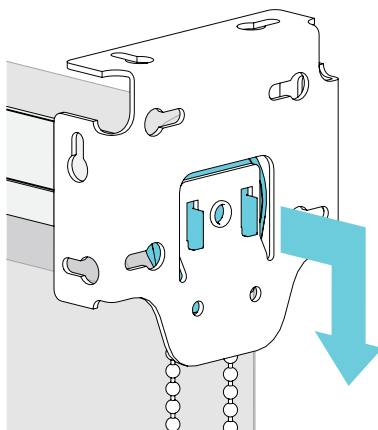


Attach Bracket Clip

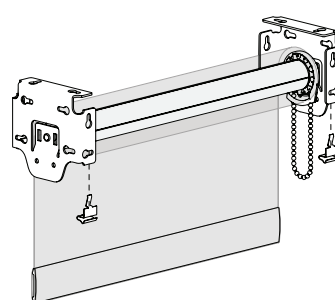

Attach Fascia Cover. Swing from top

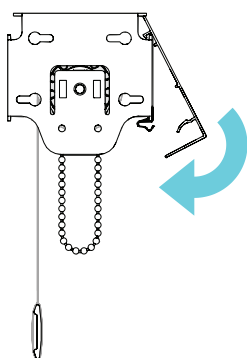


Attach Bracket Covers

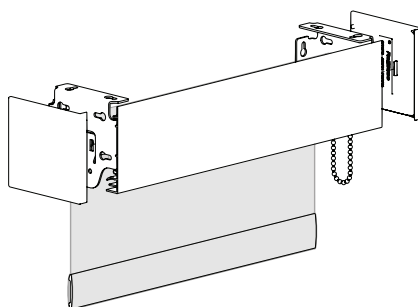


4" FASCIA - EASY LINK SYSTEM


Attach the bearing to the drive

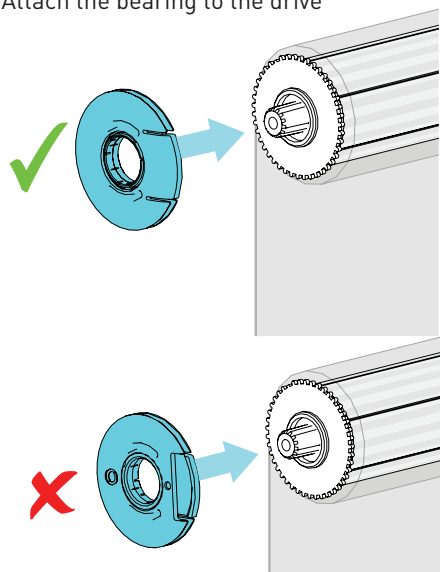


Ensure Clutch hooks engage with the bracket

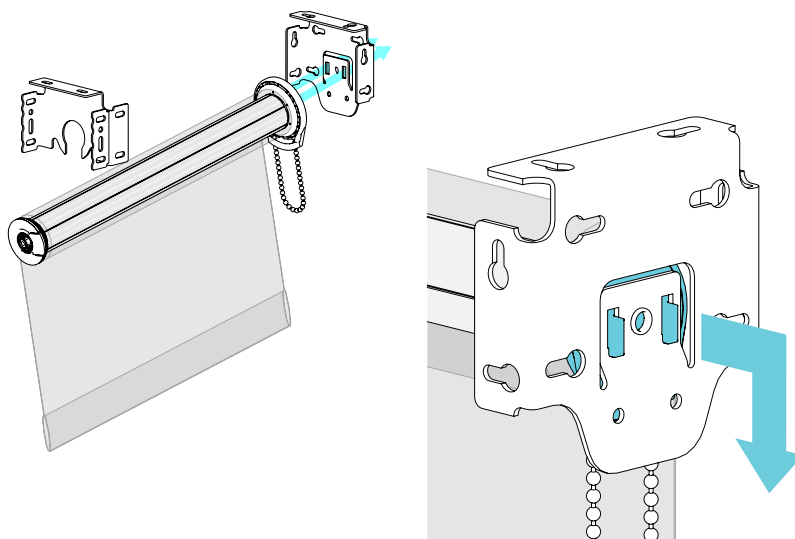


Swing in the Easy-Link End

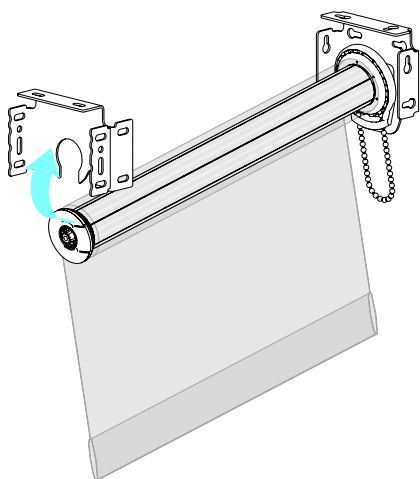

Rotate the Bracket Disk with the Skyline Bracket to lock the blind in place

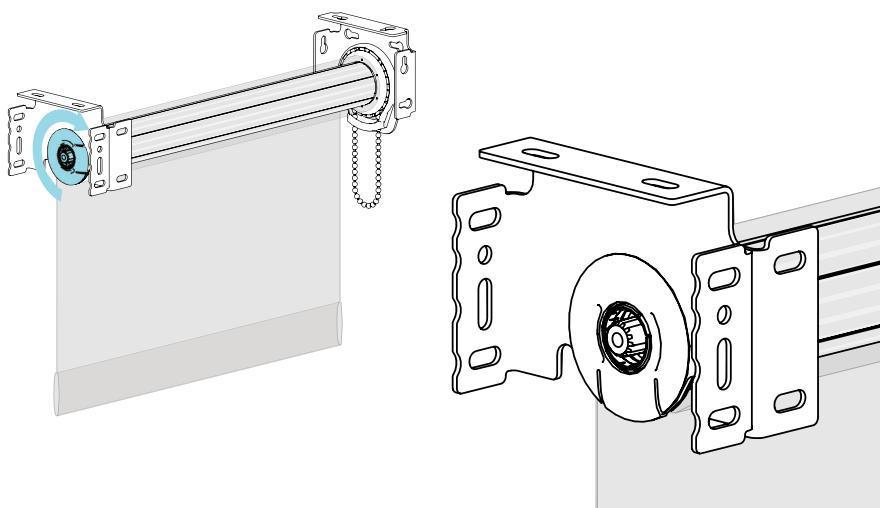

Ensure the Drive engages with the Bearing

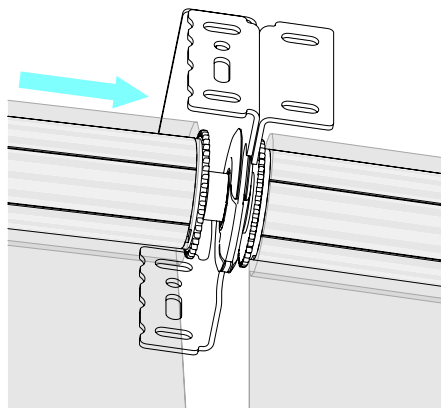

Attach the idler end to the bracket

