



3" FASCIA - SKYLINE


Wall Mount

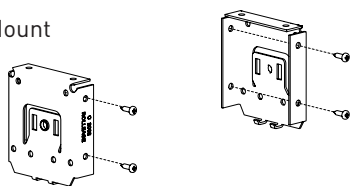


Inside Mount

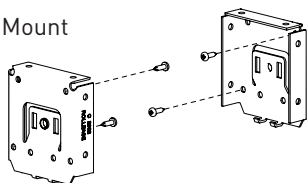


Ceiling Mount

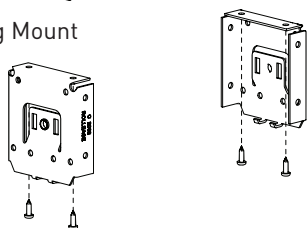


Attach Chain Diverter

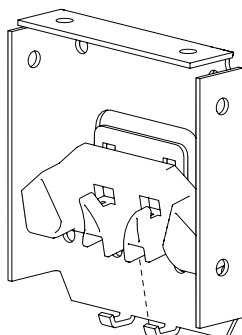


Align Clutch end first, swing assembly to bracket

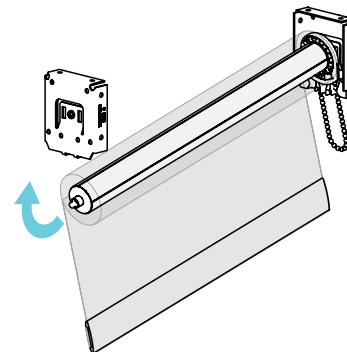

Ensure Clutch Hooks engage Bracket

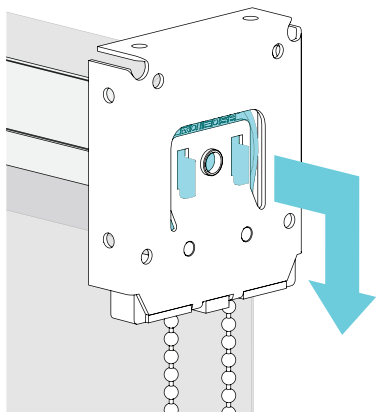


Align the chain in the diverter (SAME POSITION FOR ALL CLUTCHES)

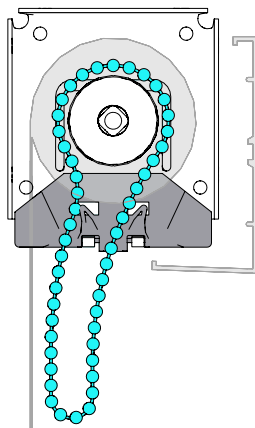


This allows room for fascia attachment

SL10 & SL15:
Attach Chain Diverter Cover

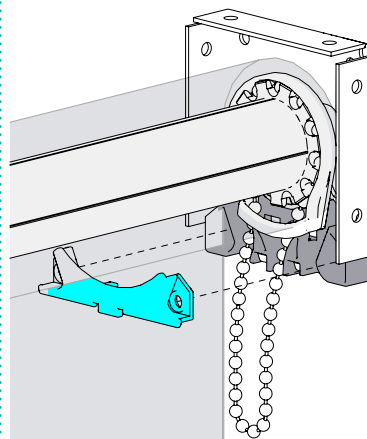


If needed, secure the cover with screws

SL20 & G200
(No Cover)

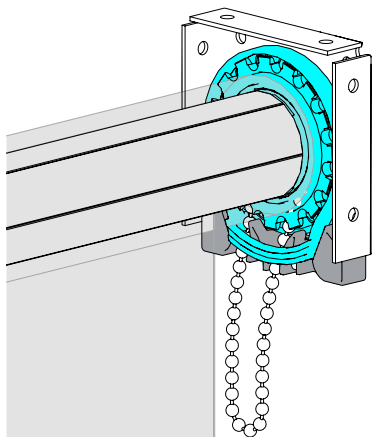

Attach Fascia Cover. Swing from top

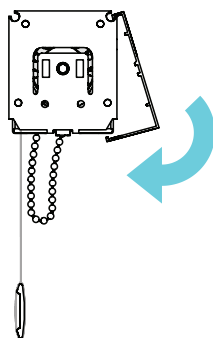

Attach Bracket Covers

