


## 5" FASCIA - SKYLINE CLUTCH | SINGLE

### Pin End Assembly


NOTE: Once the Insert Plate is assembled with the bracket, it cannot be released.

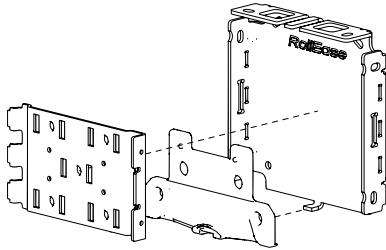

OPTIONAL:  
Use a Mallet to snap the Skyline Insert Plate to the bracket


### Control End Assembly

NOTE: Once the Insert Plate is assembled with the bracket, it cannot be released.

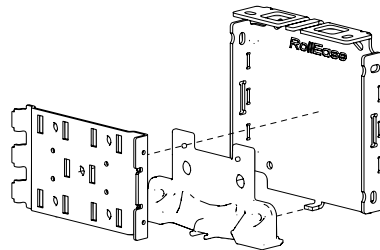


OPTIONAL:  
Use a Mallet to snap the Skyline Insert Plate to the bracket


### WALL MOUNT

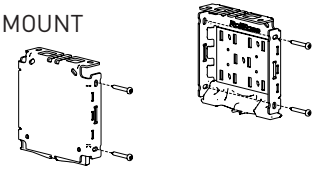


### INSIDE MOUNT

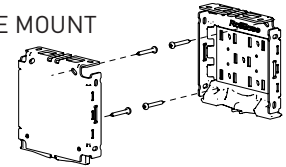


### CEILING MOUNT

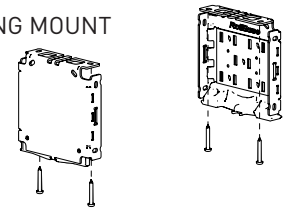

### Attach Roller Assembly Pin first

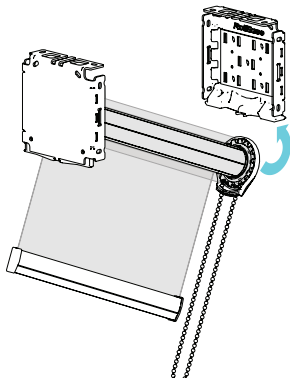


### Attach Skyline Clutch to Insert Plate

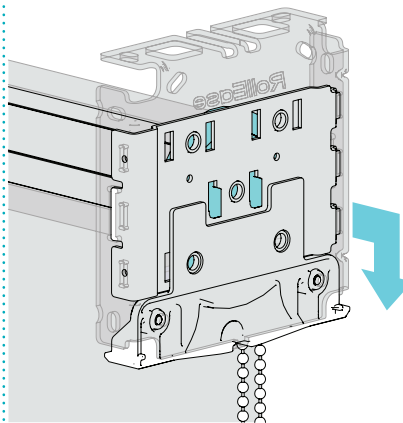


Push hooks through the Insert Plate and pull down

### Align Chain with Chain Guide

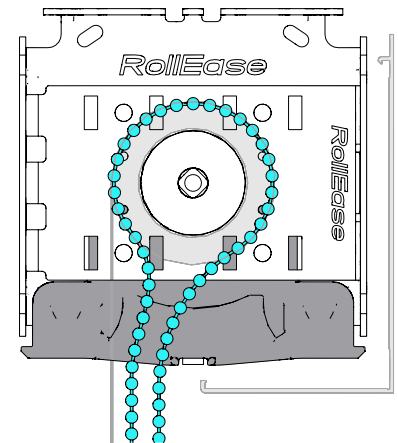


Ensure Fascia can still be attached


### Attach Chain Cover (Not required for SL30 & G400)

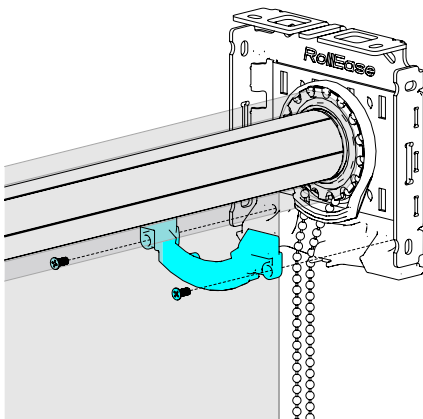

### Attach Fascia Panel

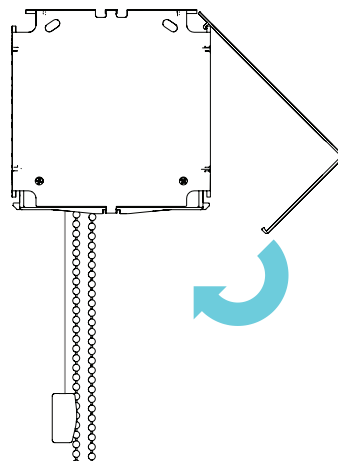


### Attach Bracket Covers

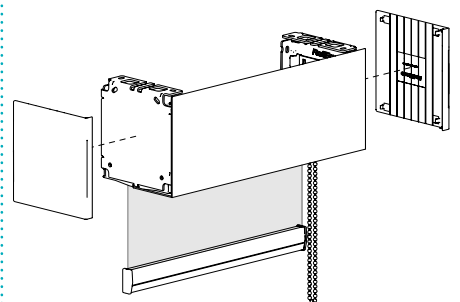

## 5" FASCIA - SKYLINE CLUTCH | DUAL

### Pin End Assembly

NOTE: Once the Insert Plate is assembled with the bracket, it cannot be released.

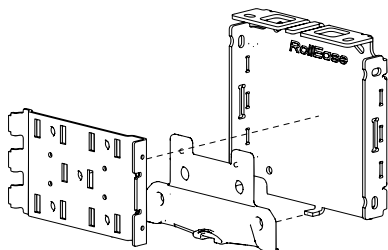


#### OPTIONAL:

Use a Mallet to snap the Skyline Insert Plate to the bracket

### Control End Assembly


NOTE: Once the Insert Plate is assembled with the bracket, it cannot be released.

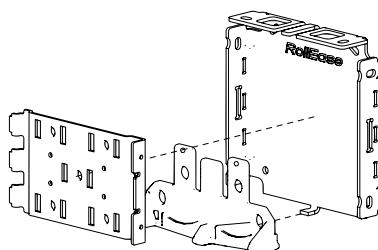


#### OPTIONAL:

Use a Mallet to snap the Skyline Insert Plate to the bracket


### WALL MOUNT

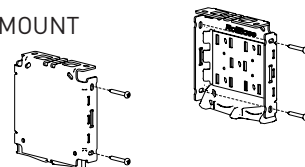

### INSIDE MOUNT

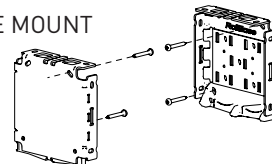


### Attach Chain Diverter to bracket Assembly

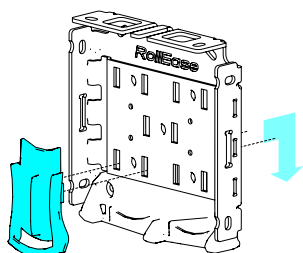


Push hooks through the bracket and pull down

### Attach Top Roller Assembly Pin first

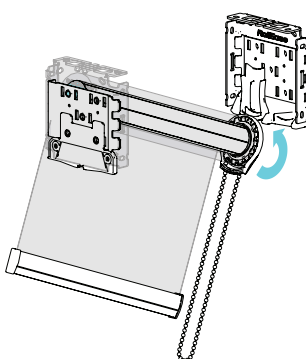


Push hooks through the bracket and pull down

### Pull Chain through Chain Diverter

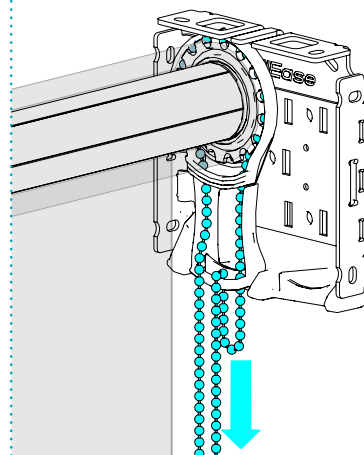


### Attach Bottom Roller Assembly Pin first

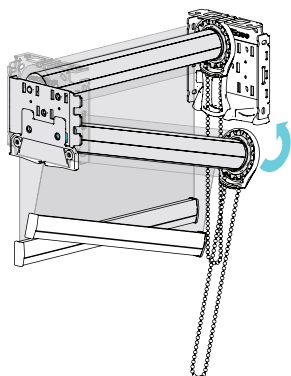


Push hooks through the bracket and pull down

### Attach Fascia Panels

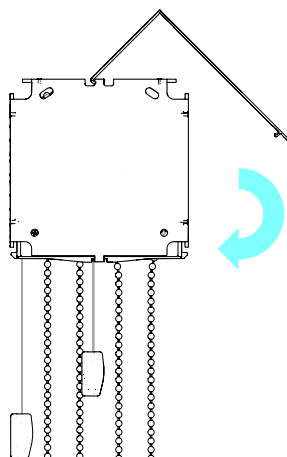


### Attach Bracket Covers

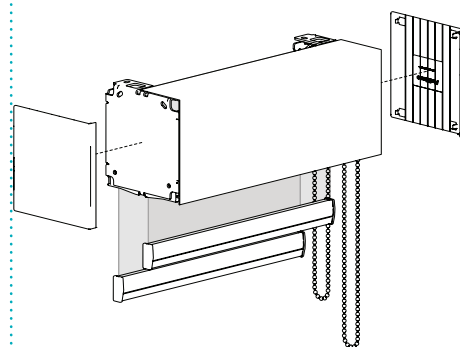

## 5" FASCIA - AUTOMATE MOTOR | SINGLE

### Pin End Assembly


NOTE: Once the Insert Plate is assembled with the bracket, it cannot be released.

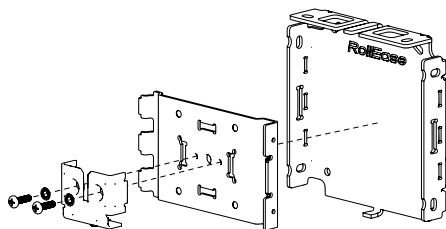

OPTIONAL:  
Use a Mallet to snap the Skyline Insert Plate to the bracket


### Control End Assembly

NOTE: Once the Insert Plate is assembled with the bracket, it cannot be released.

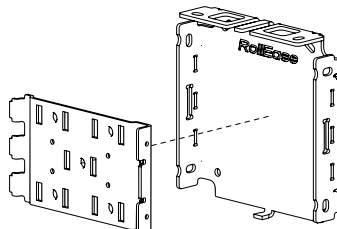


OPTIONAL:  
Use a Mallet to snap the Skyline Insert Plate to the bracket


### WALL MOUNT

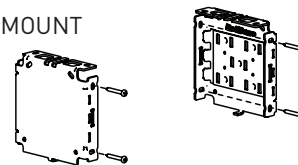


### INSIDE MOUNT

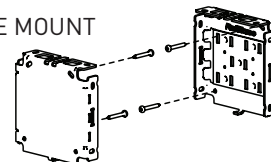


### CEILING MOUNT

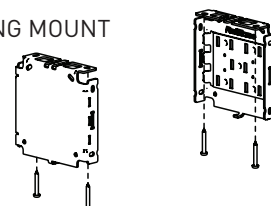

### Attach Roller Assembly Pin First

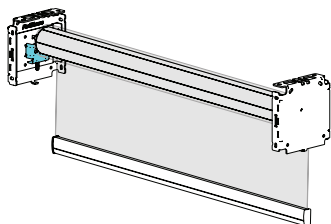


### Attach Skyline Control to Bracket

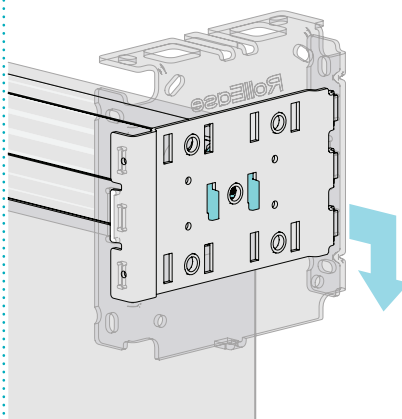


Push hooks through the bracket and pull down


### Adjust Yoke screw until Shade is level

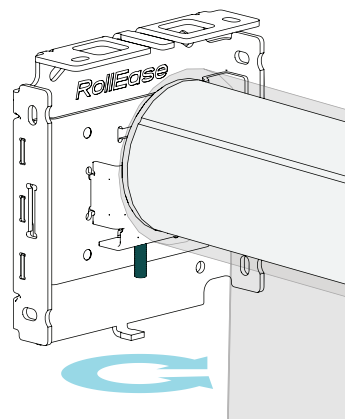

### Attach Fascia Panels

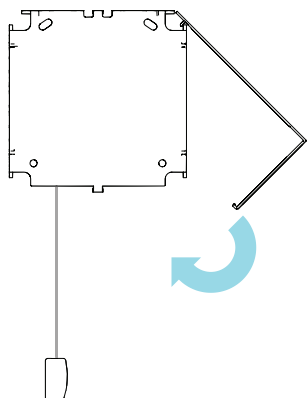


### Attach Bracket Covers

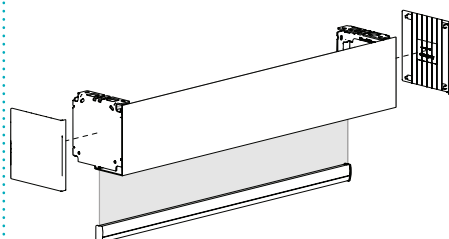

## 5" FASCIA - AUTOMATE MOTOR | DUAL

### Pin End Assembly


NOTE: Once the Insert Plate is assembled with the bracket, it cannot be released.

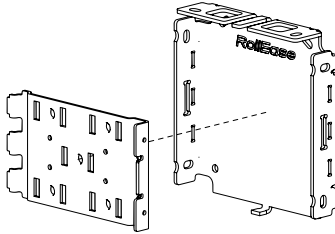

OPTIONAL:  
Use a Mallet to snap the Skyline Insert Plate to the bracket


### Control End Assembly

NOTE: Once the Insert Plate is assembled with the bracket, it cannot be released.

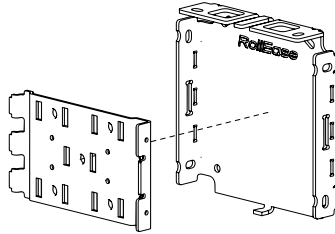


OPTIONAL:  
Use a Mallet to snap the Skyline Insert Plate to the bracket


### WALL MOUNT

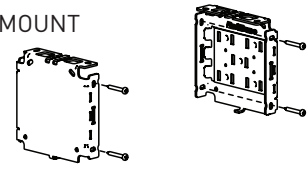


### INSIDE MOUNT

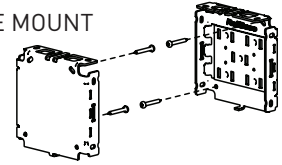

### Attach Top Roller Assembly Pin first

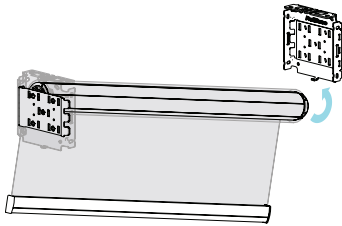


### Attach Skyline Hooks in place

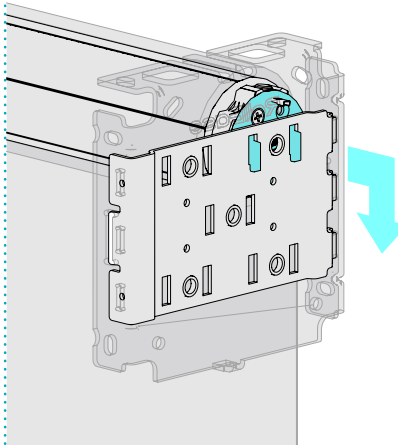


Push hooks through the bracket and pull down

### Attach Bottom Roller Assembly Pin first

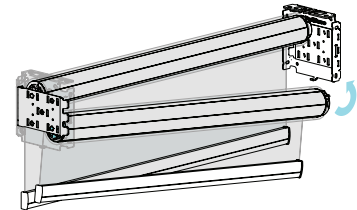


### Attach Skyline Hooks in place

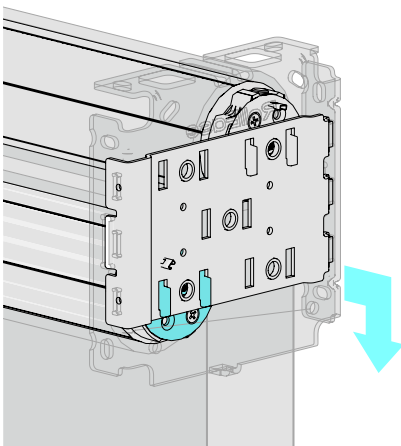

Push hooks through the bracket and pull down

### Attach Fascia Panels

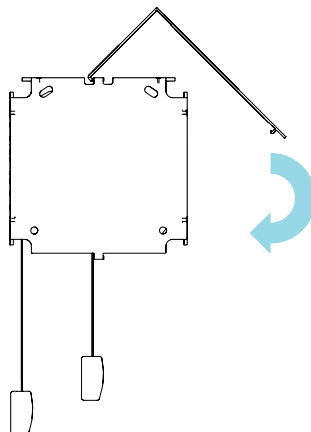

### Attach Bracket Covers

